




Amazon Fire HD 10 Front Facing Camera Replacement

Follow this guide to replace your front facing camera.

Written By: Jaie Hillery

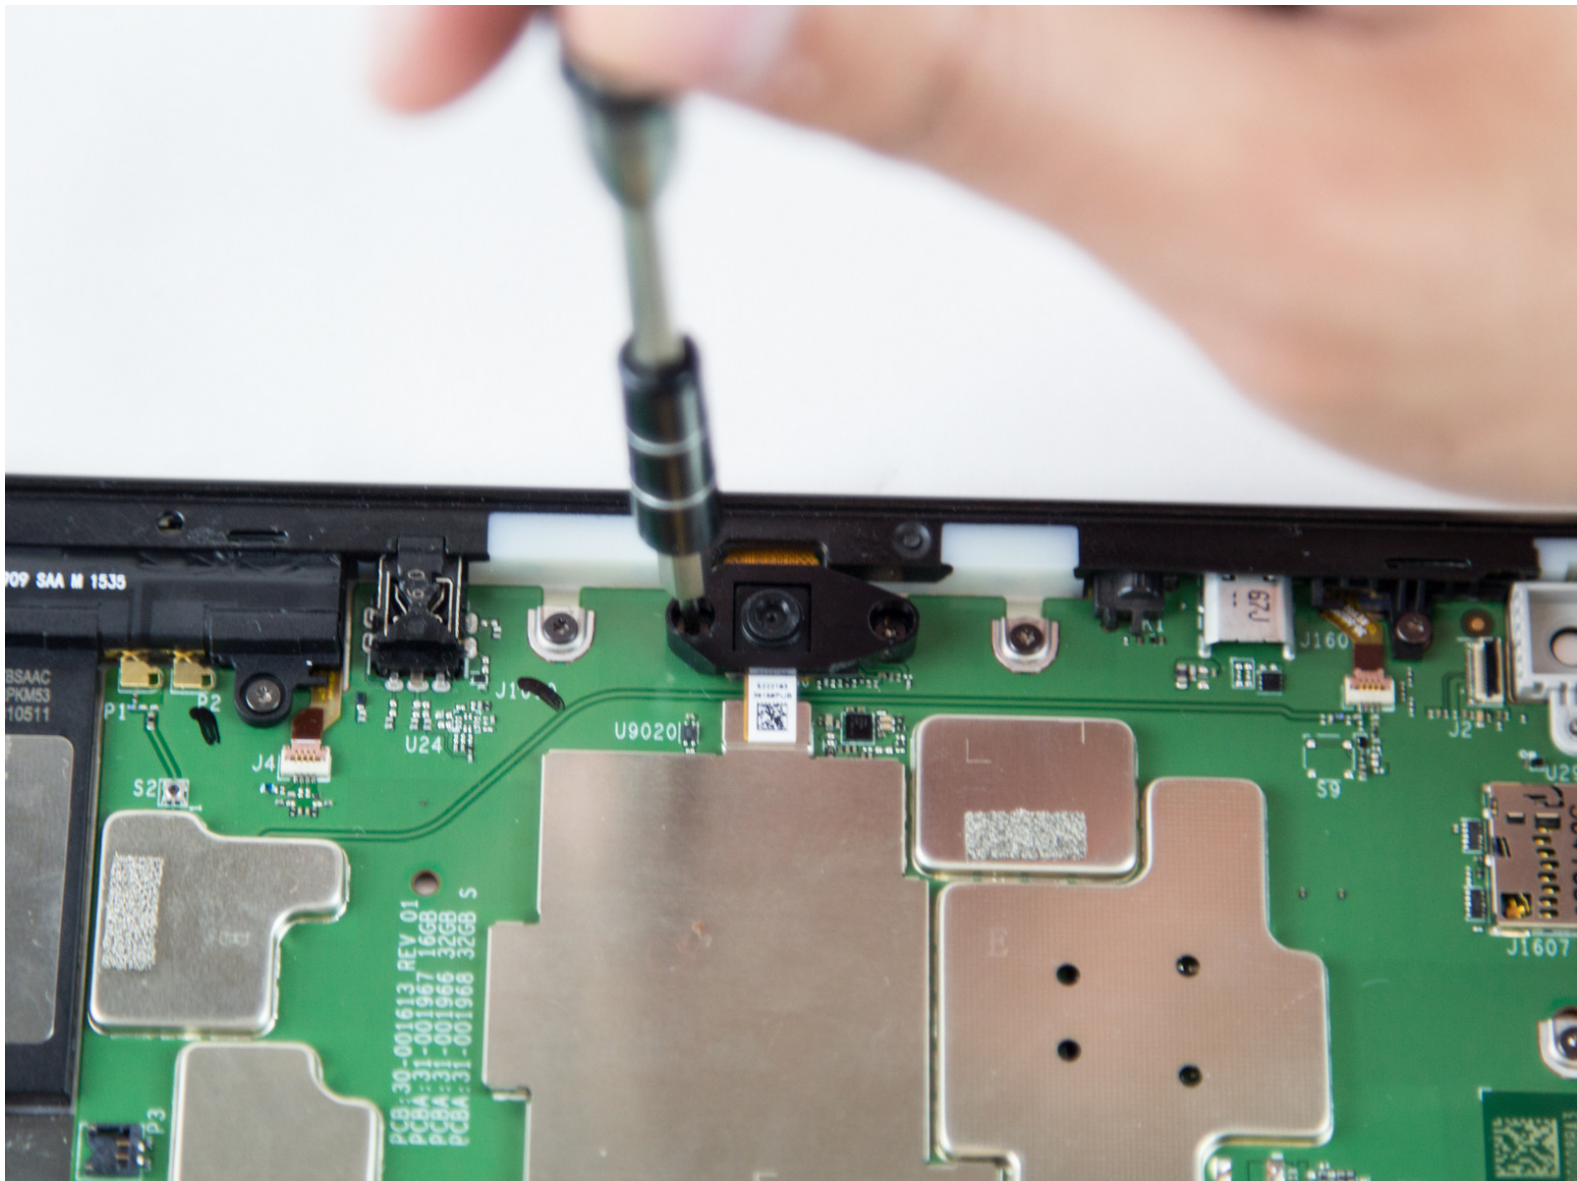

INTRODUCTION

You will need to use the screen replacement guide as a prerequisite.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-


Step 1 — Screen





 Avoid prying near bottom right hand side due to LCD Connector

- Use a plastic opening tool to pry the screen up in the right hand corner.

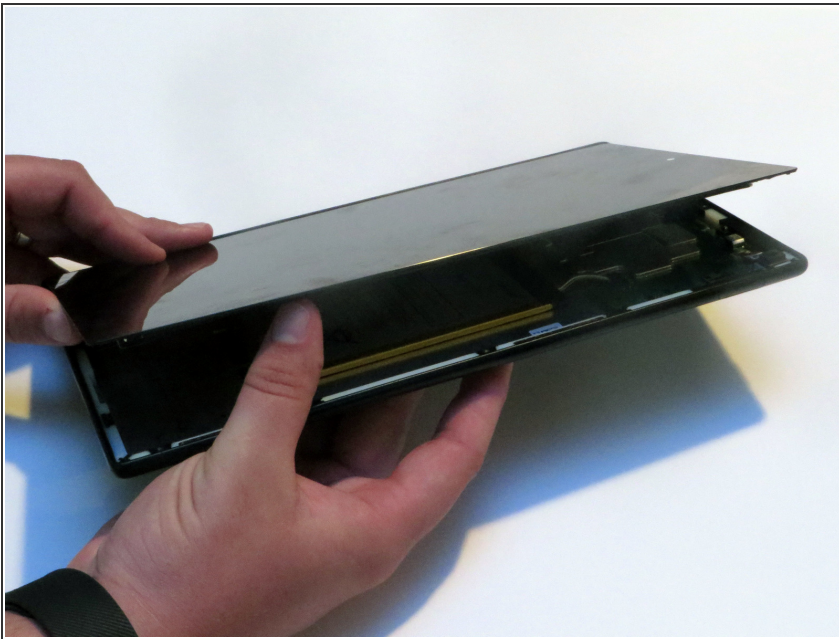
Step 2



 Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
-  You may need to use some force due to the glue.

Step 3

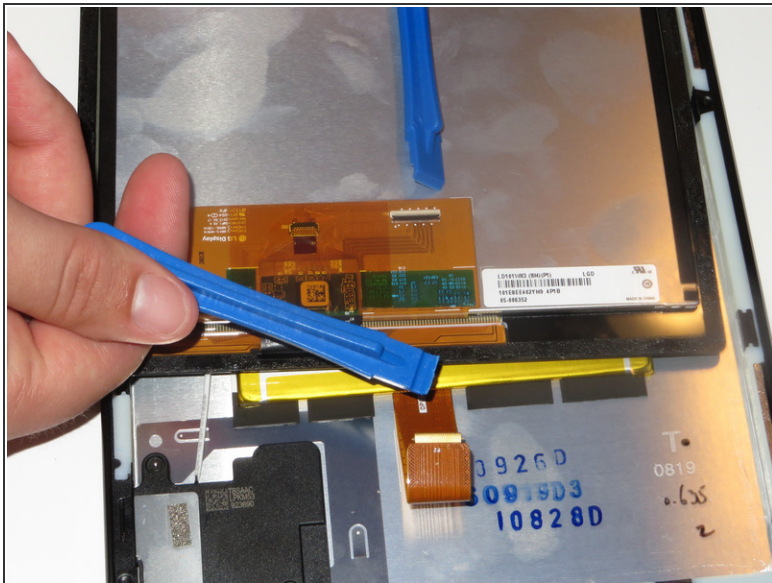

i Be mindful of the ZIF connector.


- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4



- Remove the screen and digitizer from the case completely.


Step 5 — Front Facing Camera

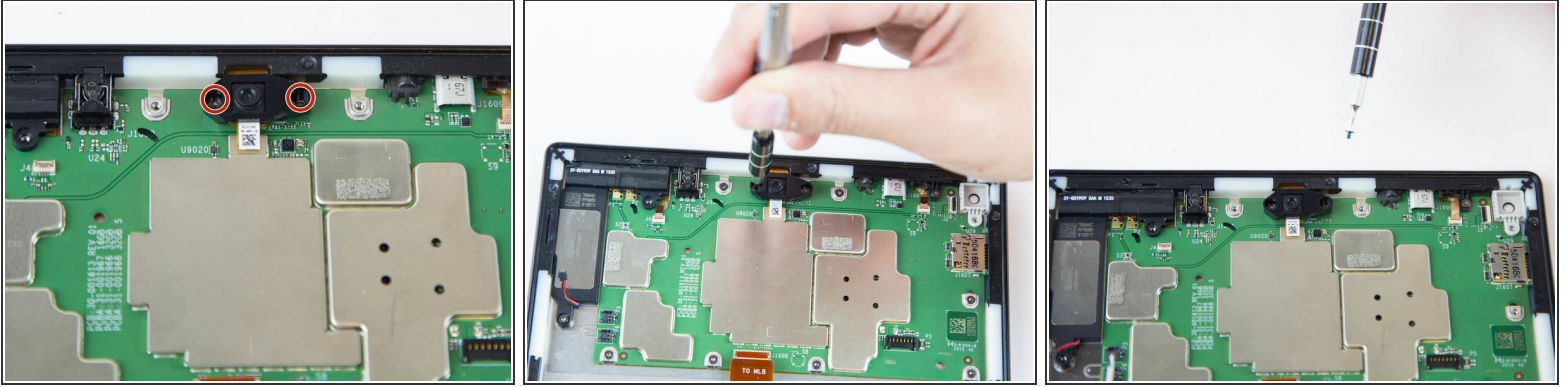

- Remove the two screws from front facing camera using the T5 Torx Screwdriver.



i Make sure you place the screws in a safe location nearby.

Step 6

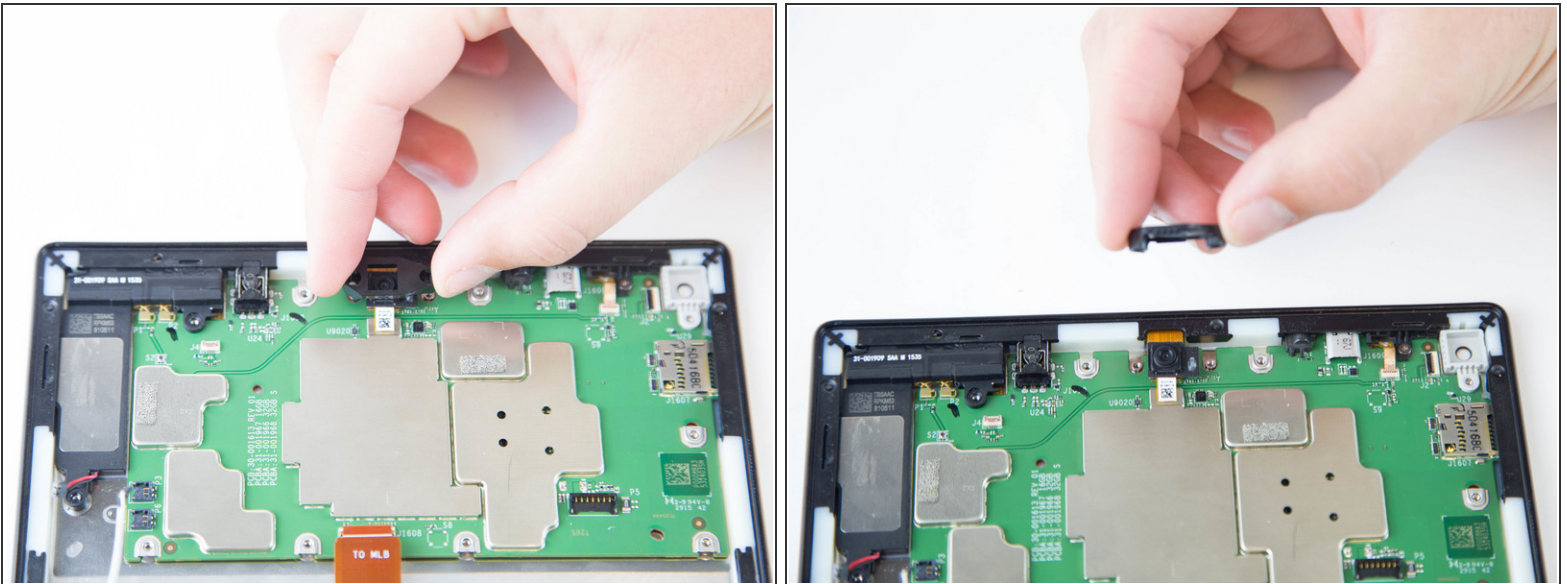

- Lift the black plastic cover once the screws are removed.
- Place aside for later reassembly.



Step 7

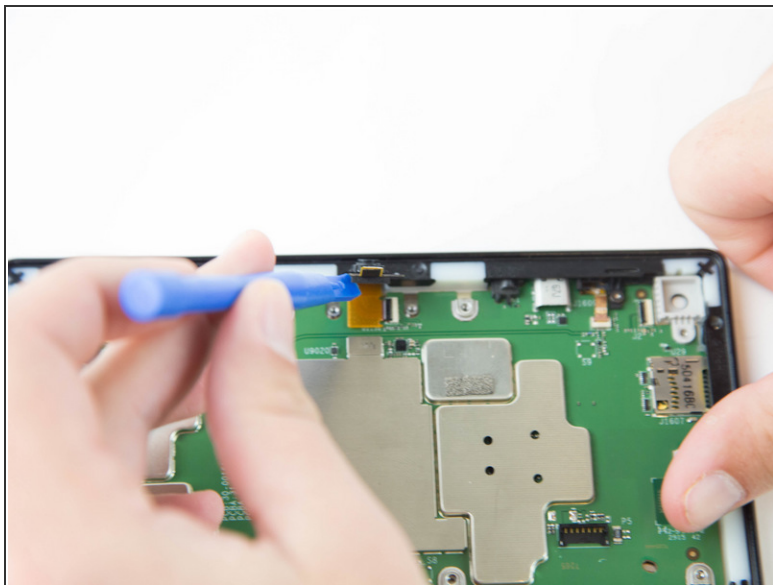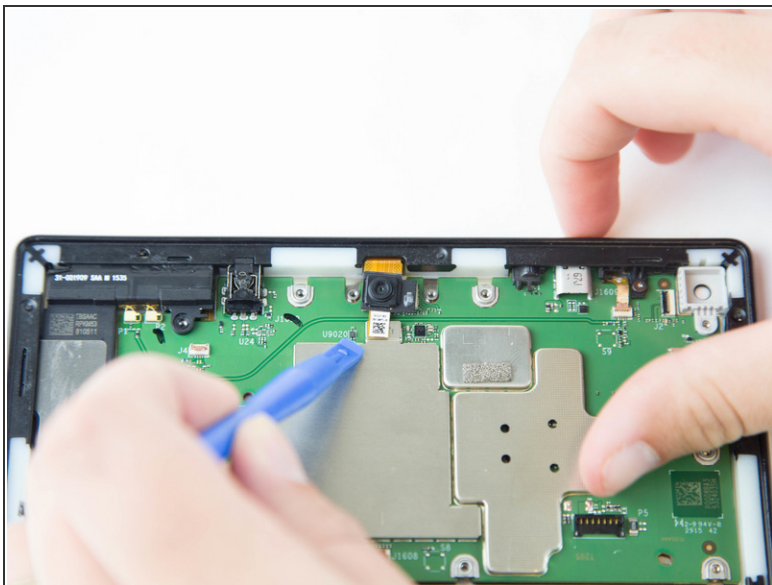

- Detach the connector using a plastic opening tool or spudger.

⚠ The camera is still connected to the motherboard.

Step 8

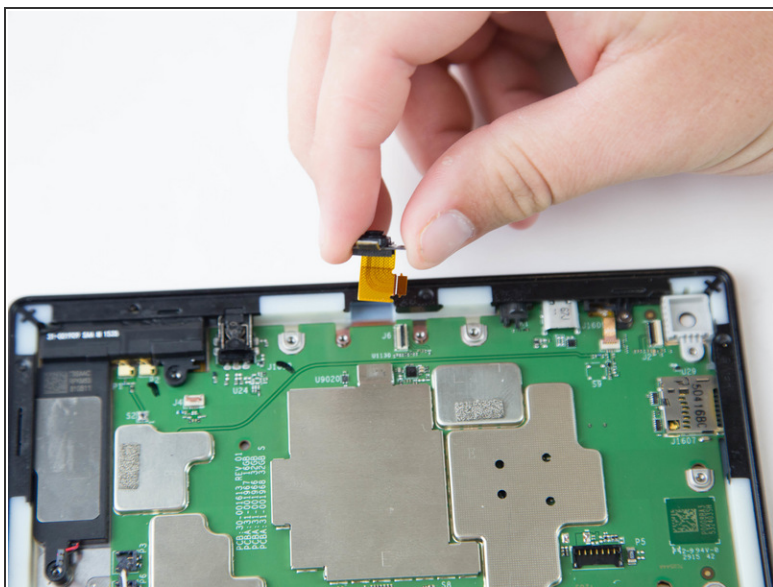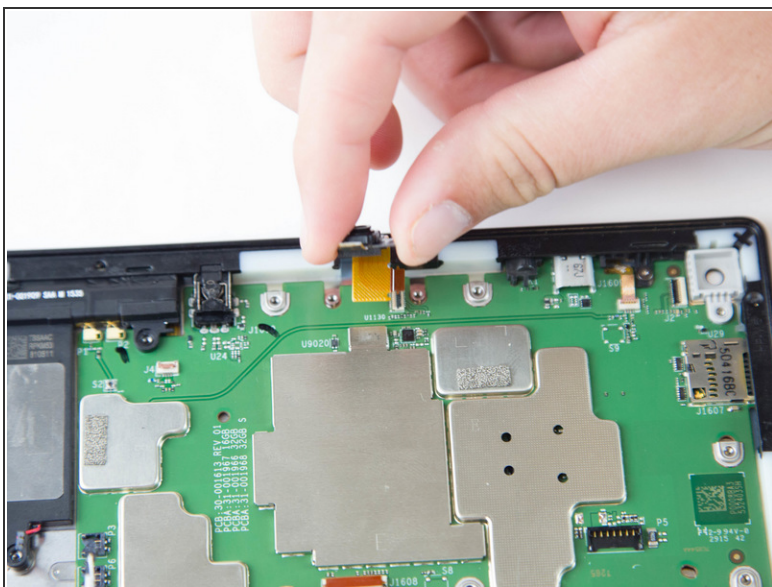

- Grip the camera and lift up to detach the ZIF connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:29:02 PM.